

**Boshart Engineering, Incorporated (Boshart) Global DPF System Parts List
 Relating to Executive Order Series DE-12-004
 Effective Date: July 11, 2013**

DPF System Parts

No	Component Name	Part Code
1	Controller	2035025
2	Controller Harness	2035127
3	ECU	4001002
4	Battery Harness	2035126
5	Fuse Holder	2078310
6	20A ATO Fuse	2035020
7	Burner Assy	Burner1/2
8	Burner Cup Gasket	2045012
9	Burner Cup Clamp	2045020
10	Burner Harness	2035128
11	Pressure Transducer Assy	2035030
12	Burner (Tf) Temperature Sensor	2035054
13	Igniter	2035073
14	Pe Sensor	4004003
15	Shutter Assembly	4004008
16	Nozzle Assembly	4004006
17	Steel Braided Fuel Line	2035032
18	Fuel Valve w/o nozzle	4004006
19	Fuel Hose (Veh Return Line)	2035032
20	Main Filter Body w/end cone	4002002/3
21	Outlet Cone (To) Temp Sensor	3003007
22	Body Gasket (Cat/II)	4004012/19
23	System Label	3003015

Safety Device Parts

No	Component Name	Part Code
24	T-Coupler	5420000
25	T-Coupler Gasket (x3)	5421300
26	Safety Valve	5410000
27	Rupture Disk	5422400
28	Rupture Disk Gasket	5422500
29	Horn Box	5441000
30	Upper RD Housing	5430000
31	Ts (Safety Thermocouple)	109101
32	Ts Protector	5434300