

Pressure Management Control

Install, Setup, & Operation Manual



Notice

Veeder-Root makes no warranty of any kind with regard to this publication, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Veeder-Root shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this publication.

This publication contains proprietary information which is protected by copyright. All rights reserved. No part of this publication may be modified or translated to another language without the prior written consent of Veeder-Root.

DAMAGE CLAIMS

1. Thoroughly examine all components and units as soon as they are received. If damaged, write a complete and detailed description of the damage on the face of the freight bill. The carrier's agent *must* verify the inspection and sign the description.
2. Immediately notify the delivering carrier of damage or loss. This notification may be given either in person or by telephone. Written confirmation must be mailed within 48 hours. Railroads and motor carriers are reluctant to make adjustments for damaged merchandise unless inspected and reported promptly.
3. Risk of loss, or damage to merchandise remains with the buyer. It is the buyer's responsibility to file a claim with the carrier involved.

RETURN SHIPPING

For the parts return procedure, please follow the appropriate instructions in the "General Returned Goods Policy" and "Parts Return" pages in the "Policies and Literature" section of the Veeder-Root **North American Environmental Products** price list.

©Veeder-Root 2007. All rights reserved.

Warranty

TLS-350R, TLS-350 PLUS, TLS-350J AND TLS-300I/C, AND TLS-2 MONITORING SYSTEMS

We warrant that this product shall be free from defects in material and workmanship for a period of one (1) year from the date of installation or twenty-four (24) months from the date of invoice, whichever occurs first. During the warranty period, we or our representative will repair or replace the product, if determined by us to be defective, at the location where the product is in use and at no charge to the purchaser. **LAMPS AND FUSES ARE NOT COVERED UNDER WARRANTY.**

We shall not be responsible for any expenses incurred by the user.

This warranty applies only when the product is installed in accordance with Veeder-Root's specifications, and a Warranty Registration and Checkout Form has been filed with Veeder-Root by an authorized Veeder-Root Distributor. This warranty will not apply to any product which has been subjected to misuse, negligence, accidents, systems that are misapplied or are not installed per Veeder-Root specifications, modified or repaired by unauthorized persons, or damage related to acts of God.

If "Warranty" is purchased as part of the Fuel Management Service, Veeder-Root will maintain the equipment for the life of the contract in accordance with the written warranty provided with the equipment. A Veeder-Root Fuel Management Services Contractor shall have free site access during Customer's regular working hours to work on the equipment. Veeder-Root has no obligation to monitor federal, state or local laws, or modify the equipment based on developments or changes in such laws.

ILS-350 MONITORING SYSTEMS

We warrant that this product shall be free from defects in material and workmanship for a period of one (1) year from the date of installation or twenty-four (24) months from the date of invoice, whichever occurs first. During the first ninety (90) days, we or our representative will repair or replace the product, if determined by us to be defective, at the location where the product is in use and at no charge to the purchaser. After the first ninety (90) days of the warranty period, we will repair or replace the product if it is returned to us, transportation prepaid, within the warranty period and is determined by us to be defective. We will not be responsible for any shipping expenses incurred by the user. **LAMPS AND FUSES ARE NOT COVERED UNDER WARRANTY.**

This warranty applies only when the product is installed in accordance with Veeder-Root's specifications, and a Warranty Registration and Checkout Form has been filed with Veeder-Root by an Authorized Veeder-Root Distributor. This warranty will not apply to any product which has been subjected to misuse, negligence, accidents, systems that are misapplied or are not installed per Veeder-Root specifications, modified or repaired by unauthorized persons, or damage related to acts of God.

MODULES, KITS, OTHER COMPONENTS (PARTS PURCHASED SEPARATE OF A COMPLETE CONSOLE)

We warrant that this product shall be free from defects in material and workmanship for a period of fifteen (15) months from date of invoice. We will repair or replace the product if the product is returned to us; transportation prepaid, within the warranty period, and is determined by us to be defective. This warranty will not apply to any product which has been subjected to misuse, negligence, accidents, systems that are misapplied or are not installed per Veeder-Root specifications, modified or repaired by unauthorized persons, or damage related to acts of God.

We shall not be responsible for any expenses incurred by the user.

Introduction

- Site Requirements 1
- Contractor Certification Requirements 1
- Related Manuals 2
- Safety Precautions 2

Installation

- Vapor Pressure Sensor 3
- Installing TLS Console Modules - General Notes 3
 - Circuit Directory 4
- Smart Sensor Interface Module 4
- NVMEM203 Board 4
- Mod Bus Module 4

Setup

- Introduction 5
- Smart Sensor Setup 5
- PMC Setup 6

Operation

- Alarms 7
 - Overview of TLS console Interface..... 7
 - Warning Posting 8
 - Alarm Posting 8
- PMC Alarm Summary 9
- PMC Status Report 10
- Viewing PMC Reports Via RS-232 Connection 10
 - Connecting Laptop to Console 10
 - Connecting Laptop to Console 11
 - Sending Console Commands..... 14

Diagnostics

- Automatic Control and Runtime Fault Alarm 19
- Manual control 19
- PMC Diagnostic Menu 19

Figures

- Figure 1. TLS console Interface Module Bays..... 3
- Figure 2. Smart Sensor Setup 5
- Figure 3. PMC Setup 6
- Figure 4. TLS console alarm interface..... 7
- Figure 5. TLS console warning example 8
- Figure 6. TLS console alarm example..... 8
- Figure 7. PMC Status Report 10
- Figure 8. Connecting laptop to TLS console for serial communication 11
- Figure 9. Connection Description window 12
- Figure 10. Connect To window..... 12
- Figure 11. Console comm port settings printout example 13
- Figure 12. HyperTerminal main window..... 14
- Figure 13. Vapor Processor Status Report Details - Serial to PC Format 16
- Figure 14. Vapor Processor Runtime Diagnostic Report - Serial to PC Format..... 17
- Figure 15. Percent Hydrocarbon Diagnostic Report - Serial to PC Format 18
- Figure 16. PMC Diagnostic Menus..... 19

Introduction

This manual provides instructions to install, setup, and operate the components of Veeder-Root Pressure Management Control (PMC) equipment. The PMC feature is an option for the TLS console platform, and as such, many of the installation/setup/operation instructions for non-PMC specific tasks are covered in TLS-3XX supplied literature. Do not use this manual when PMC is installed with ISD. Use the ISD Setup & Operation Manual, 577021-800.

Site Requirements

Below are the requirements for all PMC installations:

- V-R TLS-350R/EMC w/BIR, TLS-350 Plus/EMC Enhanced, TLS-350/EMC and ProMax consoles with ECPU2 - install as per TLS-3XX Site Prep manual, setup following instructions in TLS-3XX System Setup Manual.
- A flash memory board (NVMEM203) for PMC software storage - installed on the ECPU2 board in place of the console's 1/2 Meg RAM board - install as per TLS-350 Series Board and Software Replacement Manual, no setup required.
- Smart Sensor Module and Vapor Pressure Sensor. Install and connect following instructions in the Vapor Pressure Sensor installation Guide.
- Mod Bus module connected to a hydrocarbon sensor module installed according to processor manufacturers specifications.
- An RS-232 Port will be available for use by contractor or government inspectors.

Contractor Certification Requirements

Veeder-Root requires the following minimum training certifications for contractors who will install and setup the equipment discussed in this manual:

- | | |
|-----------------------|---|
| Level 1 | Contractors holding valid Level 1 Certification are approved to perform wiring and conduit routing, equipment mounting, probe and sensor installation, tank and line preparation, and line leak detector installation. |
| Level 2/3 or 4 | Contractors holding valid Level 2, 3 or 4 Certifications are approved to perform installation checkout, startup, programming and operations training, troubleshooting and servicing for all Veeder-Root Tank Monitoring Systems, including Line Leak Detection and associated accessories. |
| ISD/PMC | This course of training includes In-Stations Diagnostics/Pressure Management Control (ISD/PMC) installation checkout, startup, programming, and operations training. It also includes troubleshooting and service techniques for the Veeder-Root In-Station Diagnostics system. A current level 2/3 or 4 certification is a prerequisite for the ISD/PMC course. After successful completion of this course the contractor will receive a certificate as well as a Veeder-Root ISD/PMC contractor certification card. |

Warranty Registrations may only be submitted by selected Distributors.

Related Manuals

The manuals in Table 1 below are shipped with the equipment on the V-R Tech Docs CD-ROM and will be needed to install specific equipment.

Table 1 Related Manuals

V-R Manual	Part Number
TLS-3XX Site Prep Manual	576013-879
Vapor Pressure Sensor Installation Guide	577013-797
TLS-3XX Series Consoles System Setup Manual	576013-623
TLS-3XX Series Consoles Operator's Manual	576013-610
Serial Comm Modules Installation Guide	577013-528
TLS-350 Series Board and Software Replacement Manual	576013-637

Safety Precautions

The following symbols may be used throughout this manual to alert you to important safety hazards.

 <p>ELECTRICITY High voltage exists in, and is supplied to, the device. A potential shock hazard exists.</p>	 <p>TURN POWER OFF Live power to a device creates a potential shock hazard. Turn Off power to the device and associated accessories when servicing the unit.</p>
 <p>READ ALL RELATED MANUALS Knowledge of all related procedures before you begin work is important. Read and understand all manuals thoroughly. If you do not understand a procedure, ask someone who does.</p>	 <p>WARNING Heed the adjacent instructions to avoid equipment damage or personal injury.</p>

! WARNING	
 	<p>The console contains high voltages which can be lethal. It is also connected to low power devices that must be kept intrinsically safe.</p> <p>Turn power Off at the circuit breaker. Do not connect the console AC power supply until all devices are installed.</p> <p>Touching a live circuit can cause electrical shock that may result in serious injury or death.</p>

Installation

This section discusses the installation and wiring of the hardware required to enable the TLS console to perform pressure management of the site's gasoline vapor processor equipment:

- Vapor Pressure Sensor
- Smart Sensor Interface Module
- NVMEM203 board
- Mod Bus Module



All field wiring, its type, its length, etc., used for TLS console sensors must conform to the requirements outlined in the Veeder-Root TLS-3XX Site Prep manual (P/N 576013-879).

Vapor Pressure Sensor

Install one Vapor Pressure Sensor in the vapor return piping of the gasoline dispenser closest to the tanks following the instructions in the Vapor Pressure Sensor Installation guide (P/N 577013-797).

Installing TLS Console Modules - General Notes

TLS consoles have three bays in which interface modules can be installed; Comm bay, Power bay and Intrinsically-Safe bay (ref. Figure 1). Probe Interface modules and Smart Sensor modules are installed in the Intrinsically-Safe bay and the Mod Bus module is installed in the Comm bay.

In all cases, the position of the modules, their respective connectors and the devices wired to the connectors must be recorded to prevent improper replacement during installation or service. A circuit directory for Power and I.S. bay Interface Modules is adhered to the back of the right-hand door for this purpose.



Switch off power to the TLS console before you install modules and connect sensor wiring.

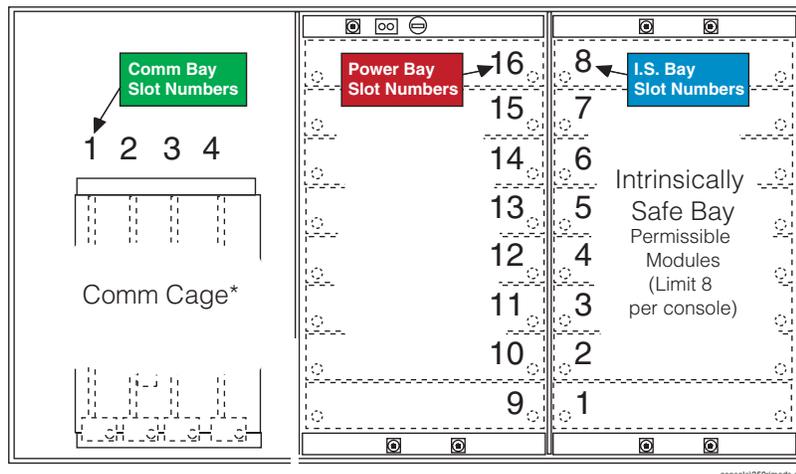


Figure 1. TLS console Interface Module Bays



CAUTION! During programming, module positions and the devices wired to each module are identified and stored in memory. If a connector is removed and reinstalled on a different module after programming, or if an entire module with its connector is removed and reinstalled in a different module slot, the TLS console will not identify correctly the data being received.

Module Position

1. Record on the circuit directory the type of module in each slot location.
2. If a system contains multiple modules of a single type (i.e., two Smart Sensor Modules), they may be swapped between their respective slot locations, **however, the connectors must remain with their original locations, not with the original modules.**

Connector Position

1. Identify all connectors according to their slot location using the self-adhesive numbering labels furnished with each module. Accurately record on the circuit directory the location of each device wired to the connector **as you attach wires** to the module.
2. Once a device has been wired to certain terminals on a connector and the system has been programmed, the wires from that device may not be relocated to other terminals without reprogramming the system.

Grounding Probe and Sensor Shields

Connect probe and sensor cable shields to ground at the console only. Do not ground both ends of the shield.

CIRCUIT DIRECTORY

A circuit directory is adhered to the inside of the right-hand door. It should be filled out by the installer as the module's connectors are being wired.

The following information should be recorded for each slot:

- **Module Type:** record what type of module has been installed in the slot, e.g., Smart Sensor Module.
- **Position Record:** record the physical location and/or type of device wired to each terminal of the module connector in the slot, e.g., VPS: FP1&2.

Smart Sensor Interface Module

Verify that a Smart Sensor Interface Module is installed in the TLS console. Connect the field wiring from the Vapor Pressure Sensor (VPS) to the Smart Sensor Interface Module as instructed in the VPS installation manual.

NVMEM203 Board

Verify that a NVMEM203 board is installed in the TLS console (ref. Figure 2-14 in the V-R TLS-3XX Series Consoles Troubleshooting Manual P/N 576013-818, Rev J or later). This board contains flash EEPROM and RAM needed to run PMC software and store PMC reports. No setup is required.

Mod Bus Module

Verify that a Mod Bus Module is installed in the Comm Bay of the TLS console and is connected to the hydrocarbon sensor module according to the processor manufacturer's specifications. No setup is required.

Setup


Introduction

This section describes how to perform PMC setup using the TLS console's front panel buttons and display. The procedures in this manual follow standard TLS console setup programming input, i.e., keypad/display interaction. If necessary, refer to Section 2 of the TLS-3XX System Setup manual (P/N 576013-623) to review entering data via the front panel keypads.

All PMC-related equipment must be installed in the site and connected to the TLS console prior to beginning the setups covered in this section. As with all TLS connections, you cannot change sensor wiring or module slots after programming or the console may not operate properly. Reference the section entitled "Connecting Probe/Sensor Wiring to Consoles" in the TLS-3XX Site Prep and Installation manual (P/N 576013-879) for rewiring precautions.

Smart Sensor Setup

The Smart Sensor Interface Module is installed in the Intrinsically-Safe bay of the TLS console. This module monitors the Vapor Pressure Sensor. Figure 2 diagrams the Smart Sensor setup procedure.

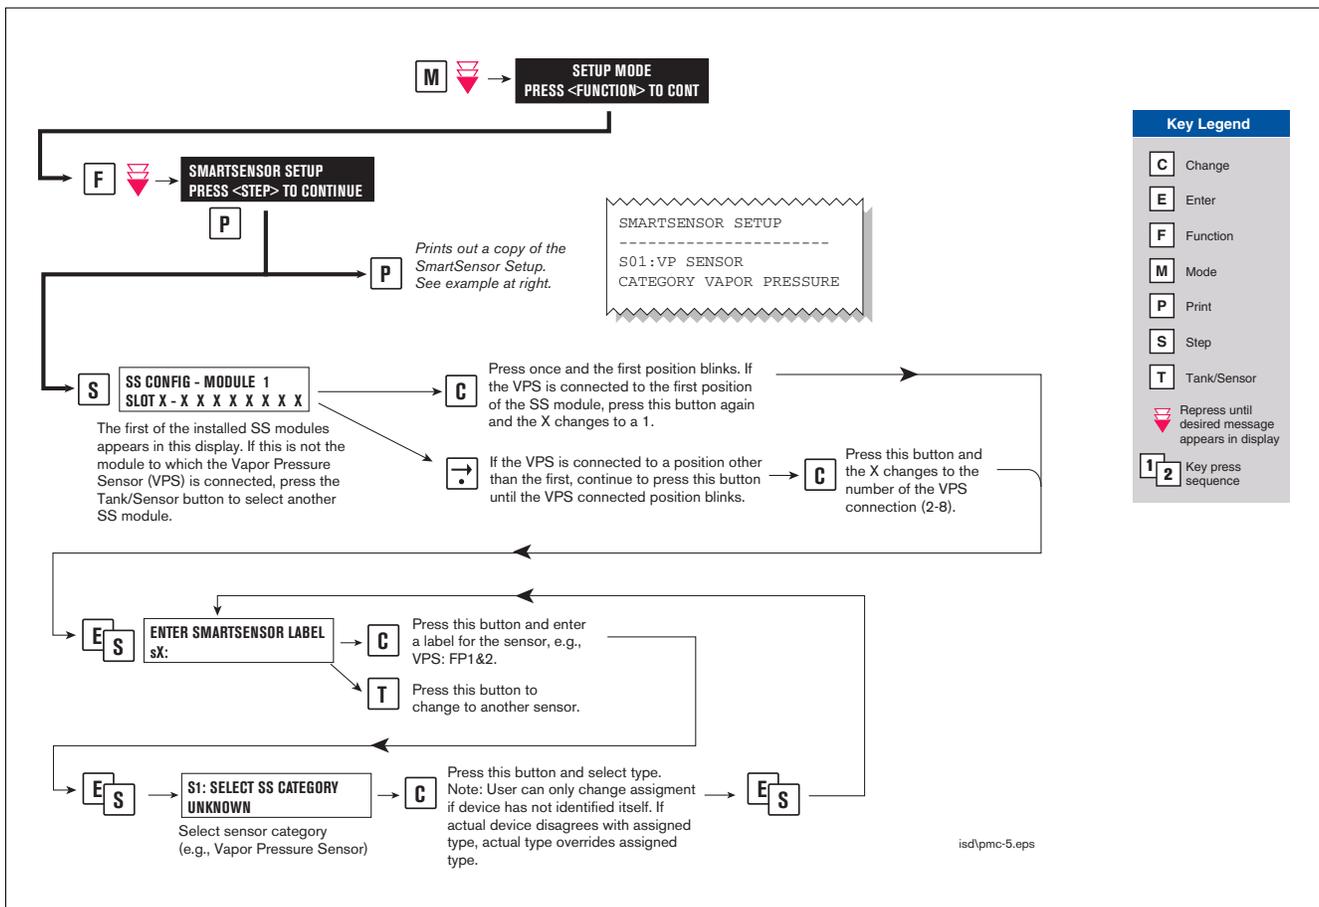

PMC Setup

Figure 3 diagrams the PMC setup programming.

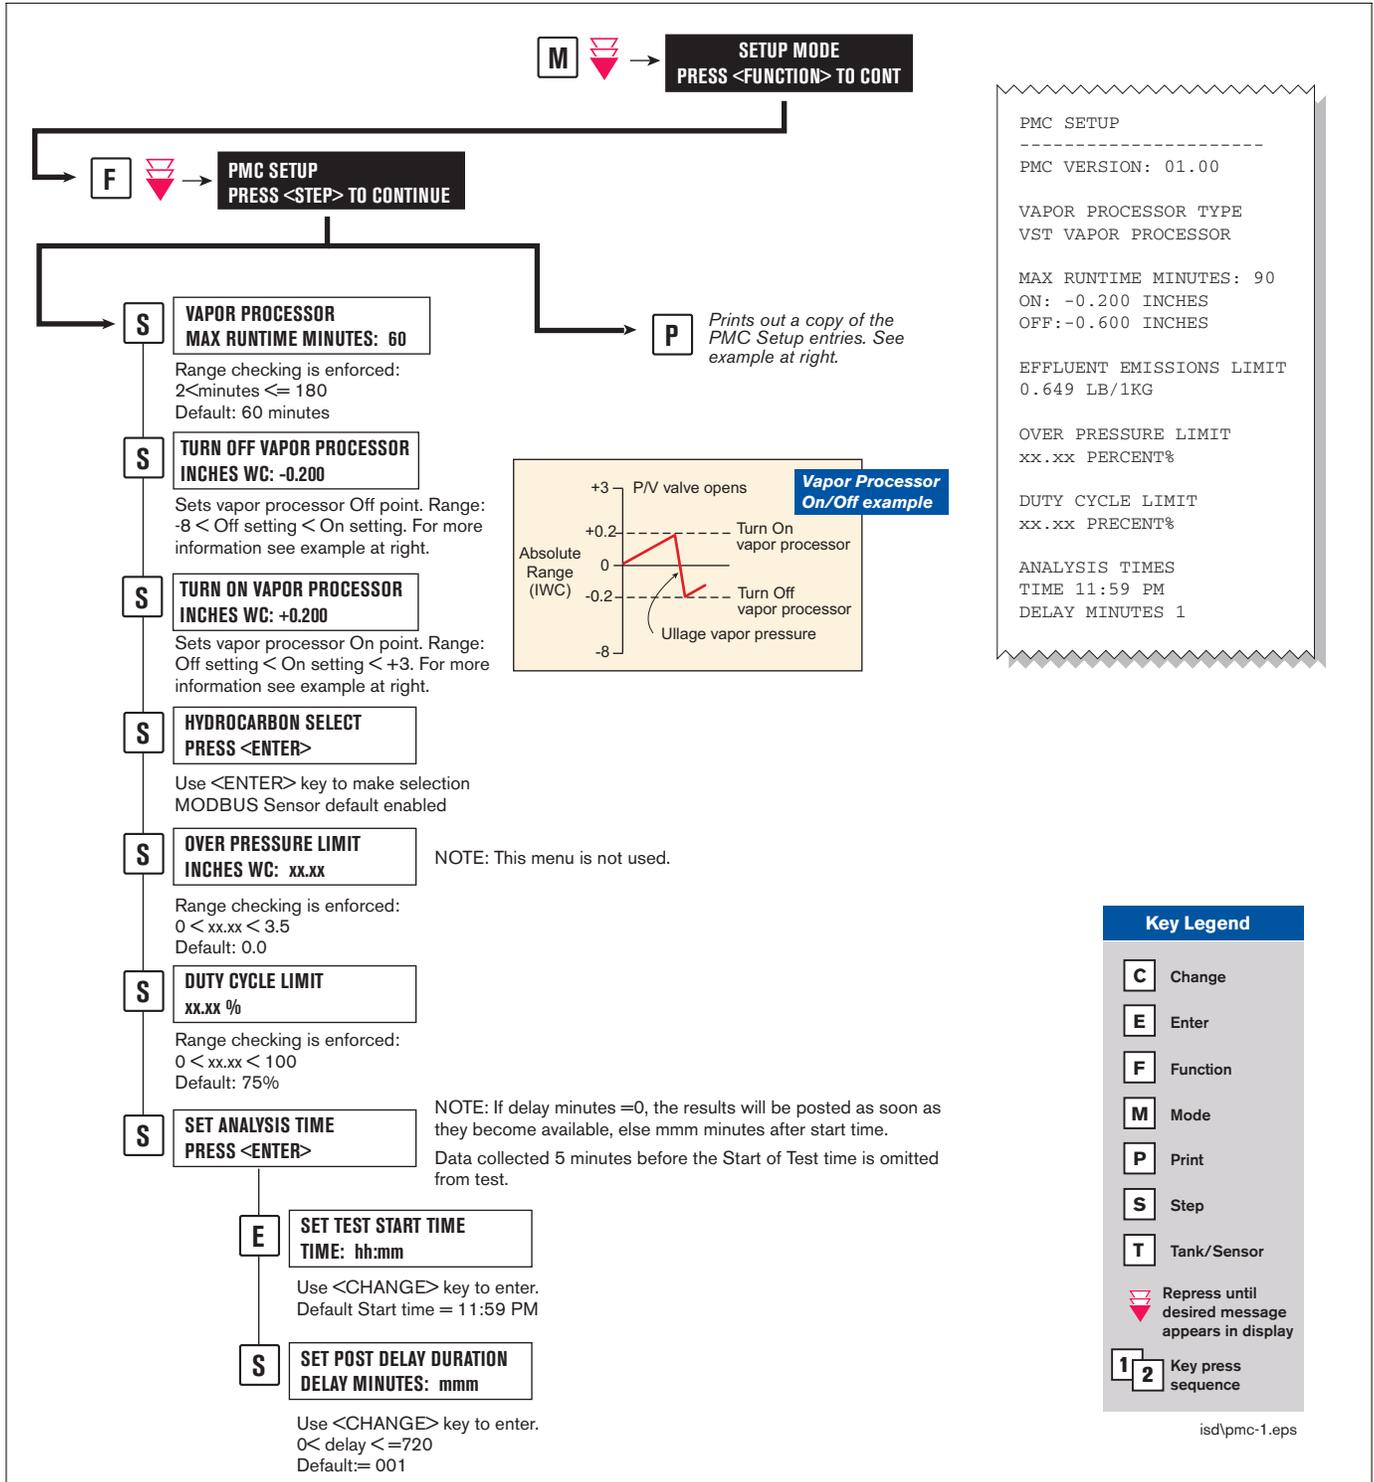


Figure 3. PMC Setup

Operation

Alarms

OVERVIEW OF TLS CONSOLE INTERFACE

The TLS console is continuously monitoring the vapor recovery system and PMC sensors for alarm conditions. During normal operation when the TLS console and monitored PMC equipment is functioning properly and no alarm conditions exist, the "ALL FUNCTIONS NORMAL" message will appear in the system status (bottom) line of the console display, and the green Power light will be On (see Figure 4).

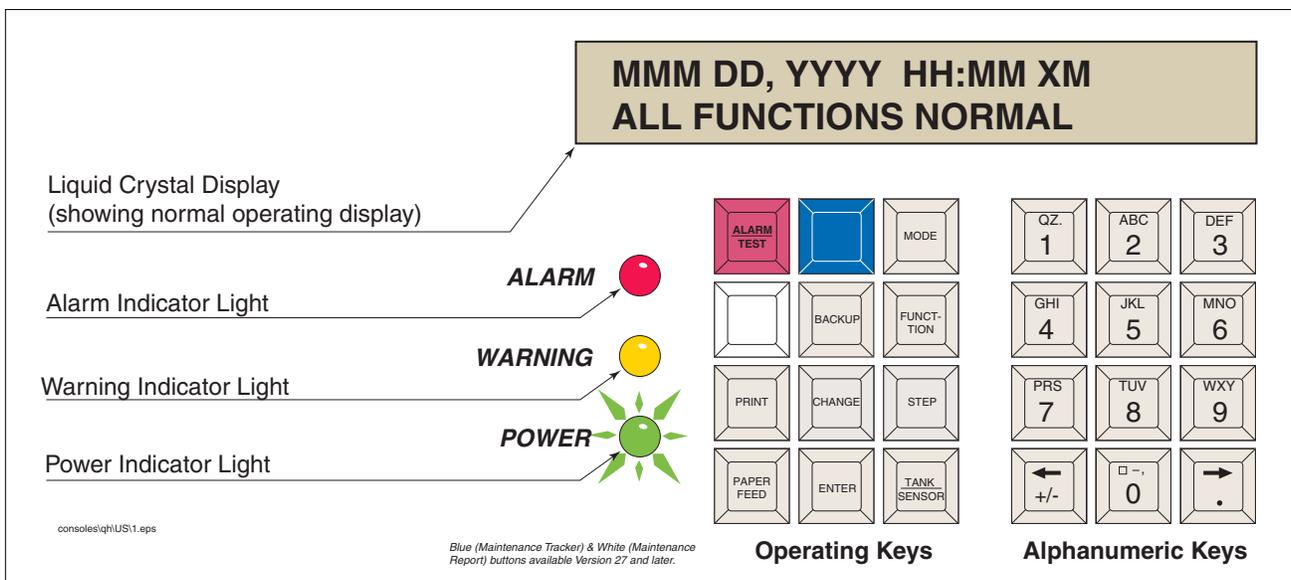


Figure 4. TLS console alarm interface

If an alarm condition occurs the system displays the condition type and its location. If more than one condition exists, the display will continuously cycle through the appropriate alarm messages. The system automatically prints an alarm report showing the alarm type, its location and the date and time the alarm condition occurred.

Warning and alarm posting causes the TLS console-based system to activate warning or failure indicator lights, an audible alarm, and an automatic strip paper printout documenting the warning or alarm.

WARNING POSTING

Displayed messages alert you to the type of warning. Printed messages show the type of warning and the time the warning was posted (see Figure 5). Warnings are logged into the Non-Priority Alarm History in the TLS.

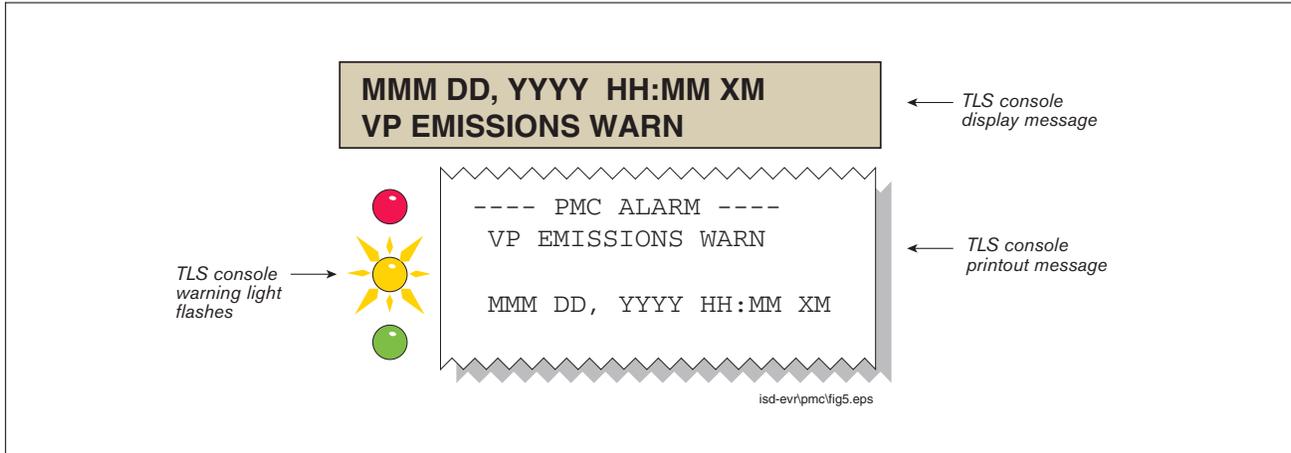


Figure 5. TLS console warning example

ALARM POSTING

Displayed Messages alert you to the type of alarm. Printed messages show the type of alarm and the time the alarm was posted. Alarm example in Figure 6. PMC Alarms are logged into the Priority Alarm History in the TLS.

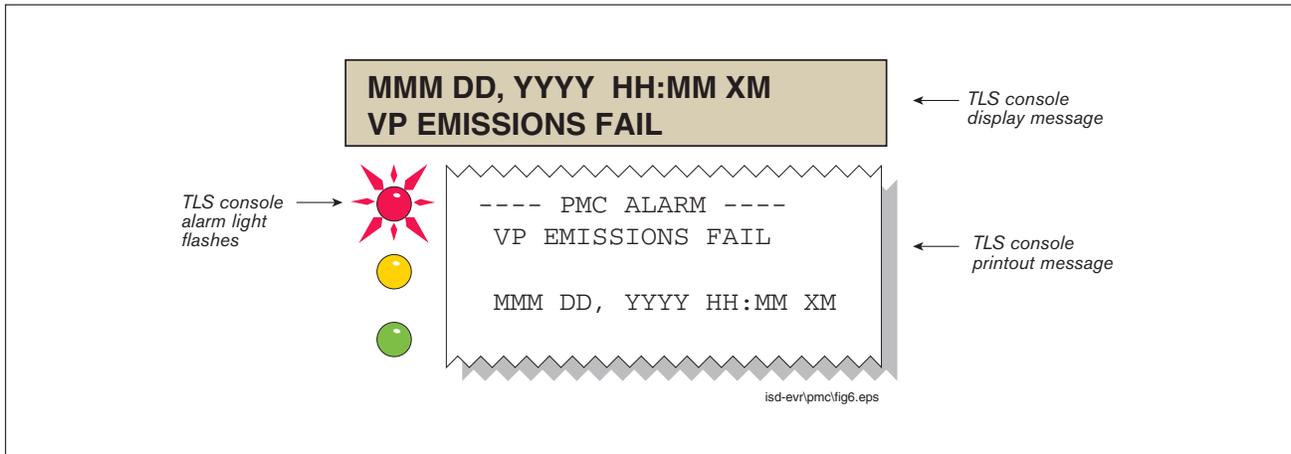


Figure 6. TLS console alarm example

PMC Alarm Summary

Table 2 contains a listing of the PMC generated alarms including their displayed message and cause. TLS Console PMC alarms may be interspersed amongst non-PMC alarms, please see TLS350 Series manuals for more information.

Table 2. TLS 350 (PMC) Alarm Troubleshooting Summary

Message (Definition)	Severity Level	Light Indicator	Suggested Troubleshooting
VP RUNTIME FAULT To notify that the Processor has continuously run for longer than 30 minutes	Warn after first 30-minute runtime	Yellow	<ul style="list-style-type: none"> • TLS-350 PMC Variable setup Confirmation Procedure: Section 16 • EO-VR-203: Exhibit 8 • TP-201.3 and EO-VR-203: Exhibit 4 • EO-VR-203: Exhibit 9 • VST Troubleshooting Manual 9514-003 (found at www.vsthose.com) • VST ASC Level C
	Fail after 2 nd consecutive 30-minute runtime	Red	
VP EMISSIONS To notify when the mass emissions exceeds the defined threshold for the system	Warn on the first day	Yellow	<ul style="list-style-type: none"> • TLS-350 PMC Variable setup Confirmation Procedure • EO-VR-203: Exhibit 6 • VST Troubleshooting Manual 9514-003 (found at www.vsthose.com) • VST ASC Level C
	Fail on consecutive days	Red	
VP PRESSURE To notify when 10% of the daily pressure-data is equal to or exceeds 1" WC.	Warn on the first day	Yellow	<ul style="list-style-type: none"> • TLS-350 PMC Variable setup Confirmation Procedure • EO-VR-203: Exhibit 8 • EO-VR-203: Exhibit 9 • VST Troubleshooting Manual 9514-003 (found at www.vsthose.com) • VST ASC Level C
	Fail on consecutive days	Red	
VP DUTY CYCLE To notify when the duty cycle exceeds 18 hours per day or 75% of a day	Warn on the first day	Yellow	<ul style="list-style-type: none"> • TLS-350 PMC Variable setup Confirmation Procedure • EO-VR-203: Exhibit 9 • TP-201.3 and EO-VR-203: Exhibit 4 • VST Troubleshooting Manual 9514-003 (found at www.vsthose.com) • VST ASC Level C
	Fail on consecutive days	Red	

PMC Status Report

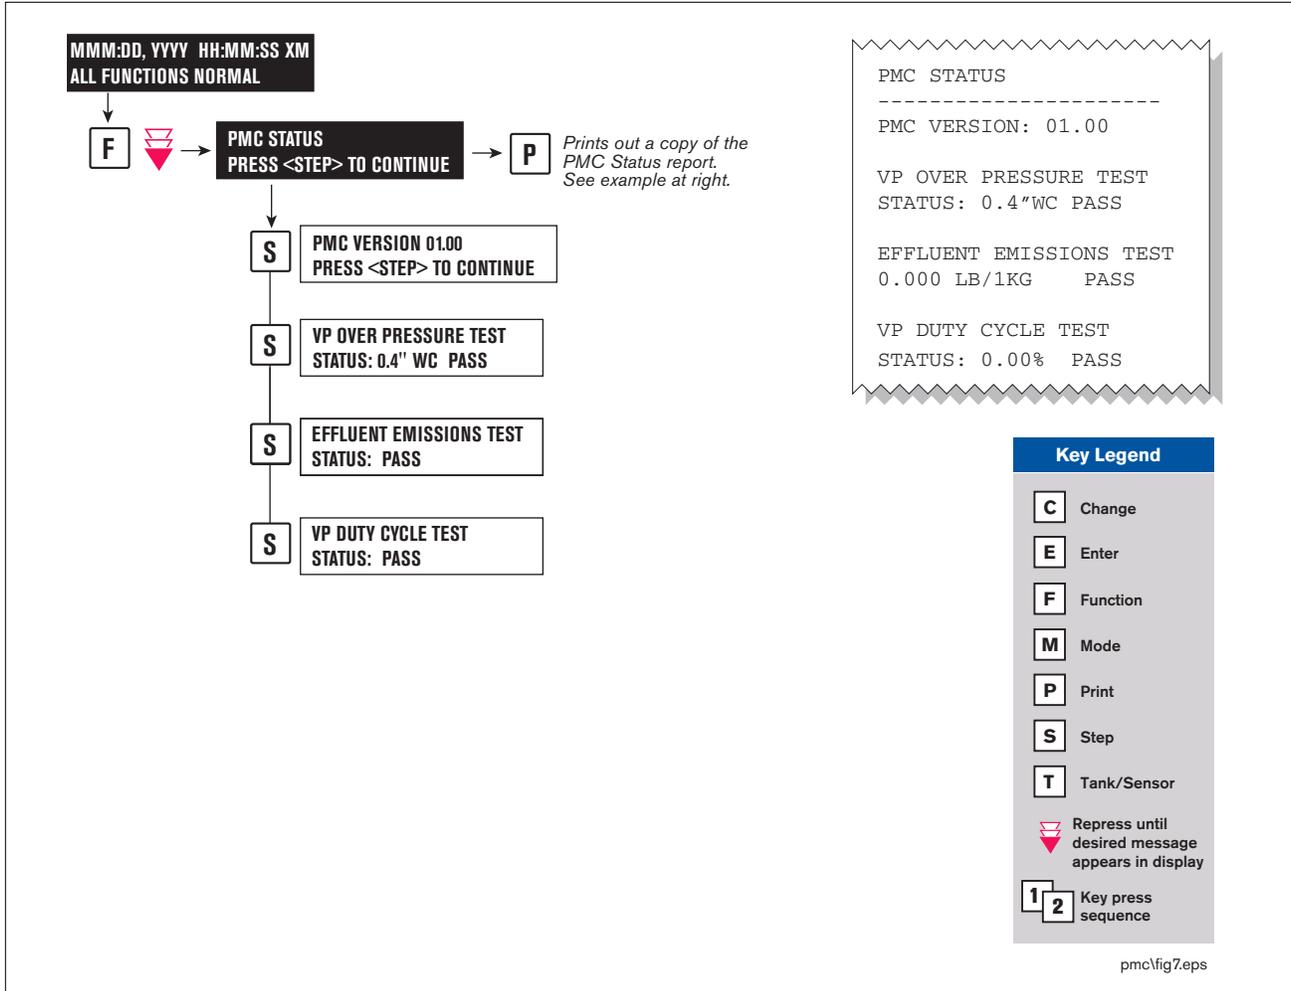


Figure 7. PMC Status Report

Viewing PMC Reports Via RS-232 Connection

CONNECTING LAPTOP TO CONSOLE

Connect your laptop to the TLS console's RS-232 or Multiport module using one of the methods shown in the examples in Figure 8 below.

2. After opening the terminal software program, ignore (cancel) any modem/dialing related request windows since you will be directly connecting to the console via serial communications. When the Connection Description window appears (Figure 9), enter a connection name, e.g., TLSDIRECT, and click the OK button



Figure 9. Connection Description window

3. After clicking the OK button, you may see a repeat of the modem/dialing windows, in which case ignore (cancel) them all.
4. When the Connect To window appears (Figure 10), depending on your connection method, select either COM1 (If RS-232 port on laptop), USB-Serial Controller (if using USB port on laptop), or Serial I/O PC Card (if using PCMCIA port on laptop) in the 'Connect using' drop down box, then click OK button.



Figure 10. Connect To window



5. Next you should see the 'Port Settings' window.

IMPORTANT! The settings of the laptop's com port must match those of the console's com port to which you are connected.

- a. Go to the console front panel press the MODE key until you see:

```

SETUP MODE
PRESS <FUNCTION> TO CONT
    
```

- b. Press the FUNCTION key until you see the message:

```

COMMUNICATIONS SETUP
PRESS <STEP> TO CONTINUE
    
```

- c. Press the STEP key until you see the message:

```

PORT SETTINGS
PRESS <ENTER>
    
```

- d. Press the PRINT key to printout the port settings for all communication modules installed in the console. Figure 11 shows an example port settings printout with the RS-232 module installed. Using the console port settings in the example below, your HyperTerminal 'Port Settings' window entries would be Bits per second - 2400, Data bits - 7, Parity - None, Stop Bits - 1. For the 'Flow Control' entry select None. Click OK.

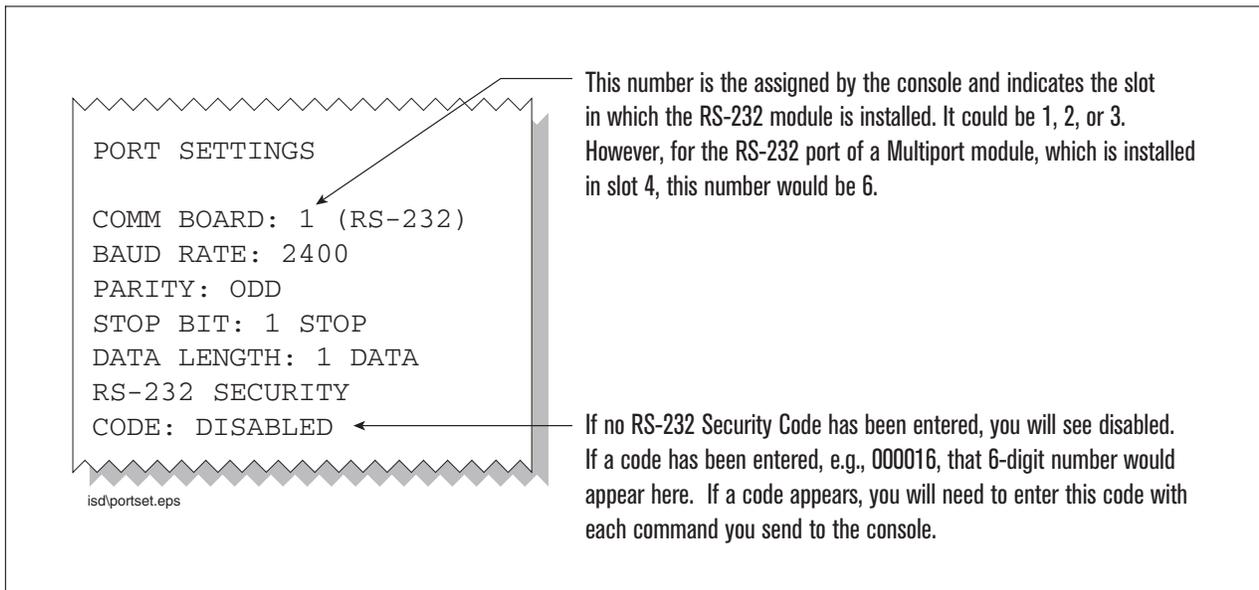


Figure 11. Console comm port settings printout example

In the example port settings printout above, the RS-232 Security Code is disabled. If the code was enabled you would see a 6-digit number which you will need to enter to access the console (refer to the 'Sending Console Commands' paragraph below for more information).

6. After entering your port settings, the program's main window appears (Figure 12).

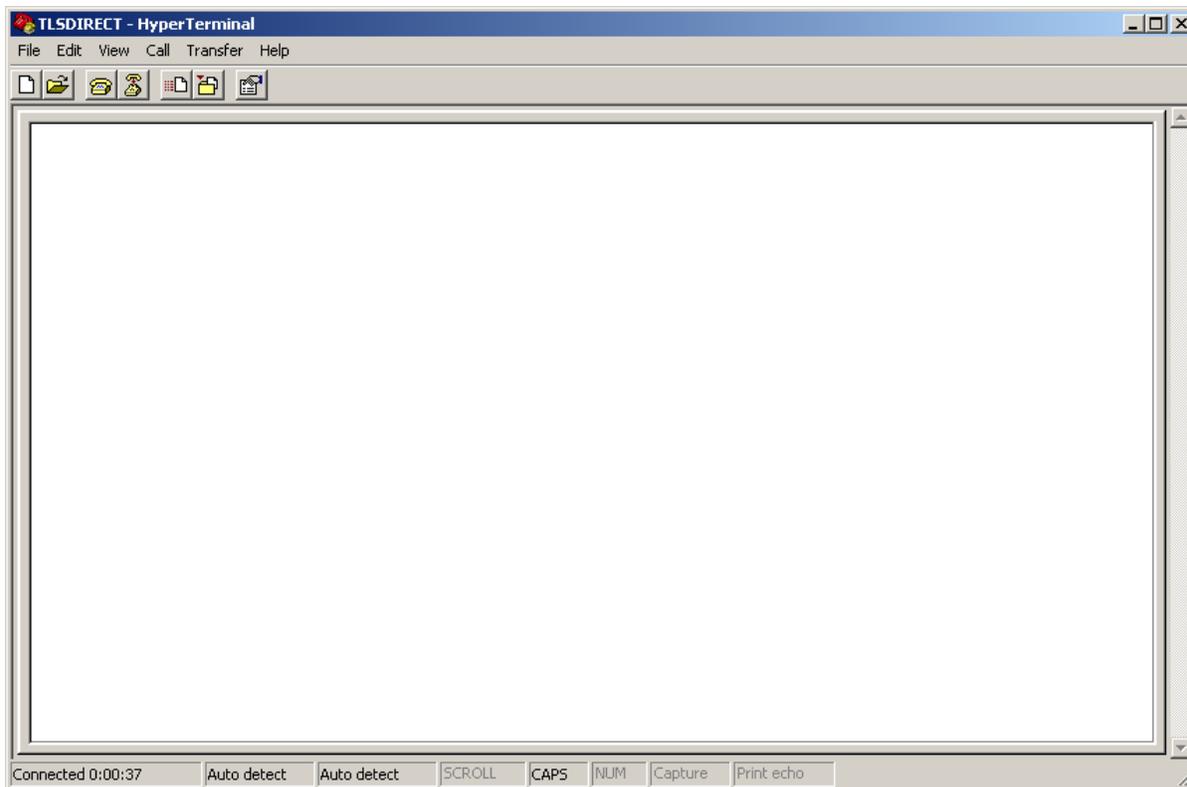


Figure 12. HyperTerminal main window

SENDING CONSOLE COMMANDS

Table 3 shows three important PMC console commands: IV8200, IV8000, and IV8100. The <SOH> shown in the table means that you must press and hold the **Ctrl** key while you press the **A** key.

For example, let's say you want to see the Vapor Processor Status Report.



Note: If you want to see the characters of the command as you type them in, click on File menu, then select Properties/Settings (tab)/ASCII Setup and click the check box for 'Echo typed characters locally', then click OK to close the window(s) and return to the main screen.

If the RS-232 Security Code is disabled - press and hold the Ctrl key while you press the A key, then type in IV8200. If the RS-232 Security Code is enabled (e.g., 000016) you must enter the security code before the command - press and hold the Ctrl key while you press the A key, then type in 000016IV8200.

You will see the typed command on the screen: ⓄIV8200 followed by the response (report) from the console. The Ⓞ symbol indicates Ctrl+A and the ♥ symbol indicates the end of the response.

If the console recognizes the command the response displays as soon as the command is typed in.

If the console does not recognize the command you would see something like ⓄIV8200Ⓞ9999FF1B♥ which indicates the console did not recognize the command.

All responses (Reports) can be printed or saved to a file. See the terminal program's help file for instructions.

Table 3. Serial Commands for PMC Diagnostic Reports

Report Type	Serial Command (PC to Console)*
Vapor Processor Status Report (See example Figure 13)	<SOH>IV8200
Vapor Processor Runtime Diagnostic Report (See example Figure 14)	<SOH>IV8000
Percent Hydrocarbon Diagnostic Report (See example Figure 15)	<SOH>IV8100

*<SOH> = Control A. For more information on TLS console serial commands, refer to the V-R Serial Interface Manual.

```

<SOH>
  IV8200
  JUN 1, 2002  8:07 AM

  (SITE NAME)
  (SITE STREET)
  (CITY, STATE)
  (PHONE NUMBER)

VAPOR PROCESSOR STATUS REPORT

PMC VERSION: 01.00
VAPOR PROCESSOR TYPE: VST VAPOR PROCESSOR

PMC MONITORING TEST PASS/FAIL THRESHOLDS

          PERIOD      BELOW  ABOVE
VAPOR PROCESSOR PRESSURE FAIL, 90th PERCENTILE 1DAYS  ----  1.00 INCHES
H2O
VAPOR PROCESSOR MASS EMISSION FAIL          1DAYS  ----  0.64 LBS/1KG
VAPOR PROCESSOR DUTY CYCLE FAIL            1DAYS  ----  75.00 %

VP OVER PRESSURE TEST   : PASS      (0.03 INCHES H2O)
EFFLUENT EMISSIONS TEST : PASS      (0.32 LBS/1KG)
VP DUTY CYCLE TEST     : PASS      (17.54%)
VP INPUT STATUS        : NOTEST

RUN TIME HOURS       :    4.2
DAILY THROUGHPUT    :   8421 GALS
AVG HC PERCENT      :    8.85 %
  
```

Figure 13. Vapor Processor Status Report Details - Serial to PC Format

```

IV8000
AUG 30, 2007 11:52 AM

(SITE NAME)
(SITE STREET)
(CITY, STATE)
(PHONE NUMBER)

VAPOR PROCESSOR
DATE-TIME ON           ELAPSED      PRESSURE INCHES H2O  RUNTIME
MINUTES              ON           OFF             FAULT
3-08-07  8:52PM        5.53          0.209          -0.211         NO
3-08-07  8:58PM         0.98          0.303          -0.203         NO
3-09-07  5:03AM        26.60         0.221          -0.205         NO
3-09-07  1:15PM        17.92         0.278          -0.268         NO
3-10-07  3:01AM         7.70          0.200          -0.223         NO
3-10-07  4:30AM         4.02          0.202          -0.224         NO
3-10-07  7:54PM        23.62         0.306          -0.245         NO
3-11-07  11:24PM         6.55          0.256          -0.213         NO
3-12-07  11:31PM        21.23         0.228          -0.203         NO
3-13-07  3:44PM        23.95         0.926          -0.230         NO
3-15-07  1:35AM        30.00         0.202           0.154         YES
3-15-07  2:36AM         6.87          0.200          -0.205         NO
3-15-07  3:24AM        30.00         0.201           0.442         YES
3-16-07  3:10AM         4.33          0.202          -0.205         NO
3-16-07  1:28PM        20.78         0.234          -0.264         NO
3-16-07  2:38PM         1.30          0.220          -0.219         NO
3-17-07  12:44AM         6.52          0.206          -0.200         NO
3-17-07  2:00PM        27.47         0.254          -.210         NO
    
```

Figure 14. Vapor Processor Runtime Diagnostic Report - Serial to PC Format

```
IV8100
AUG 30, 2007 11:53 AM
HYDROCARBON SENSOR DIAGNOSTIC
DATE/TIME          READING %
8-25-07  7:58AM   1.050
8-25-07  7:58AM   1.040
8-25-07  7:58AM   1.036
8-25-07  7:58AM   1.042
8-25-07  7:57AM   1.040
8-25-07  7:57AM   1.040
8-25-07  7:57AM   1.032
8-25-07  7:57AM   1.030
8-25-07  7:56AM   1.050
8-25-07  7:56AM   1.040
8-25-07  7:56AM   1.040
8-25-07  7:56AM   1.032
8-25-07  7:55AM   1.050
8-25-07  7:55AM   1.026
8-25-07  7:55AM   1.012
8-25-07  7:55AM   1.032
8-25-07  7:54AM   1.026
8-25-07  7:54AM   1.046
8-25-07  7:54AM   1.022
8-25-07  7:54AM   1.012
8-25-07  7:53AM   1.012
8-25-07  7:53AM   1.022
8-25-07  7:53AM   1.022
8-25-07  7:53AM   1.022
```

Figure 15. Percent Hydrocarbon Diagnostic Report - Serial to PC Format

Diagnostics

Automatic Control and Runtime Fault Alarm

Under automatic control, vapor pressure readings are compared to user programmable thresholds to determine the appropriate Pressure Management Device (PMD) state. When the PMD is off and the OVERPRESSURE LIMIT is exceeded, an internal relay is enabled and remains so until the pressure drops below the TURN OFF VAPOR PROCESSOR threshold. Automatic control is the default mode.

Manual control

If PMC mode is Manual, the diagnostic menu allows the PMD to be directly turned on/off through the relay. This feature is to support unit operational testing without waiting for the pressure to hit limits. The current UST ullage space vapor pressure will also be available through the diagnostic menu. The VC1 RS232 command allows for remote control of the PMD when the PMD control is manual. Note: If the PMD is on and the PMC mode is Automatic, changing the control mode to Manual mode will turn the PMD off.

PMC Diagnostic Menu

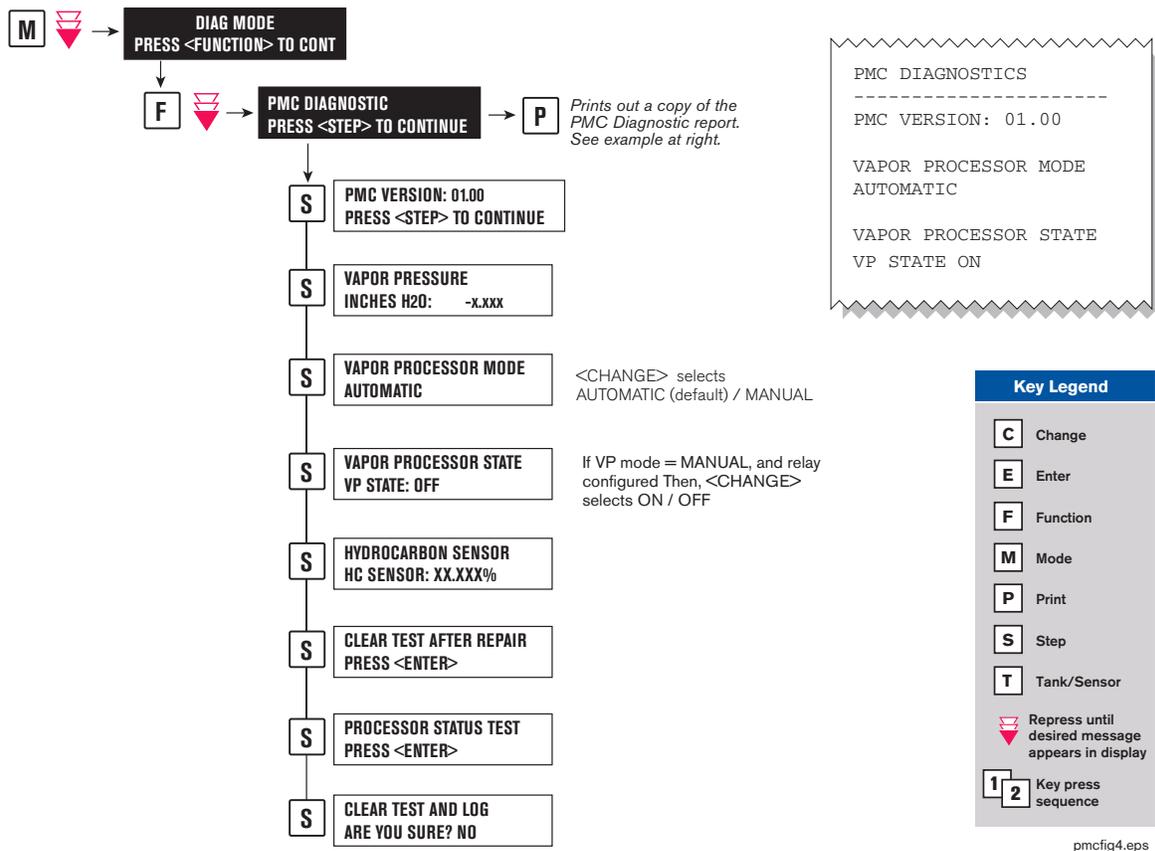


Figure 16. PMC Diagnostic Menus

